

# User Manual

Revision 1.010  
English

## BACnet/IP slave / CAN - Converter

(Order Code: HD67677-IP-A1)

## BACnet MS/TP slave / CAN - Converter

(Order Code: HD67677-MSTP-A1, HD67677-MSTP-B2)

For Website information:

[www.adfweb.com?Product=HD67677](http://www.adfweb.com?Product=HD67677)

For Price information:

[www.adfweb.com?Price=HD67677-A1](http://www.adfweb.com?Price=HD67677-A1)

### Benefits and Main Features:

- ✦ Very easy to configure
- ✦ Triple electrical isolation
- ✦ Temperature range: -40°C/85°C (-40°F/185°F)



For others PROFINET products see also the following link:

#### Converter BACnet to

- [www.adfweb.com?Product=HD67056](http://www.adfweb.com?Product=HD67056)
- [www.adfweb.com?Product=HD67671](http://www.adfweb.com?Product=HD67671)
- [www.adfweb.com?Product=HD67672](http://www.adfweb.com?Product=HD67672)
- [www.adfweb.com?Product=HD67673](http://www.adfweb.com?Product=HD67673)
- [www.adfweb.com?Product=HD67674](http://www.adfweb.com?Product=HD67674)
- [www.adfweb.com?Product=HD67675](http://www.adfweb.com?Product=HD67675)
- [www.adfweb.com?Product=HD67676](http://www.adfweb.com?Product=HD67676)
- [www.adfweb.com?Product=HD67677](http://www.adfweb.com?Product=HD67677)
- [www.adfweb.com?Product=HD67678](http://www.adfweb.com?Product=HD67678)
- [www.adfweb.com?Product=HD67679](http://www.adfweb.com?Product=HD67679)
- [www.adfweb.com?Product=HD67680](http://www.adfweb.com?Product=HD67680)
- [www.adfweb.com?Product=HD67681](http://www.adfweb.com?Product=HD67681)
- [www.adfweb.com?Product=HD67682](http://www.adfweb.com?Product=HD67682)
- [www.adfweb.com?Product=HD67683](http://www.adfweb.com?Product=HD67683)
- [www.adfweb.com?Product=HD67684](http://www.adfweb.com?Product=HD67684)

- (M-Bus Master)**
- (Modbus Master)**
- (Modbus Slave)**
- (Modbus TCP Master)**
- (Modbus TCP Slave)**
- (PROFIBUS Master)**
- (PROFIBUS Slave)**
- (CAN)**
- (CANopen)**
- (PROFINET)**
- (DeviceNet Master)**
- (DeviceNet Slave)**
- (EtherNet/IP)**
- (NMEA 2000)**
- (Ethernet)**

Do you have an your customer protocol?

[www.adfweb.com?Product=HD67003](http://www.adfweb.com?Product=HD67003)

Do you need to choose a device? do you want help?

[www.adfweb.com?Cmd=helpme](http://www.adfweb.com?Cmd=helpme)



User Manual

**INDEX:**

	Page
INDEX	2
UPDATED DOCUMENTATION	2
REVISION LIST	2
WARNING	2
TRADEMARKS	2
SECURITY ALERT	3
EXAMPLE OF CONNECTION	4
CONNECTION SCHEME	5
CHARACTERISTICS	8
CONFIGURATION	8
POWER SUPPLY	9
FUNCTION MODES	10
LEDS	11
CAN	14
ETHERNET	15
RS485	16
USE OF COMPOSITOR SW67677	17
NEW CONFIGURATION / OPEN CONFIGURATION	18
SOFTWARE OPTIONS	19
SET COMMUNICATION	20
RECEIVE FRAMES	22
INFO RECEIVE	23
SEND FRAMES	24
INFO SEND	25
SET BACNET ACCESS	26
OBJECTS MAP	28
UPDATE DEVICE	29
MECHANICAL DIMENSIONS	31
ORDERING INFORMATIONS	32
ACCESSORIES	32
DISCLAIMER	33
OTHER REGULATIONS AND STANDARDS	33
WARRANTIES AND TECHNICAL SUPPORT	34
RETURN POLICY	34

**UPDATED DOCUMENTATION:**

Dear customer, we thank you for your attention and we remind you that you need to check that the following document is:

- Updated
- Related to the product you own

To obtain the most recently updated document, note the “document code” that appears at the top right-hand corner of each page of this document.

With this “Document Code” go to web page [www.adfweb.com/download/](http://www.adfweb.com/download/) and search for the corresponding code on the page. Click on the proper “Document Code” and download the updates.

**REVISION LIST:**

Revision	Date	Author	Chapter	Description
1.000	15/02/2013	FI	All	First Release
1.001	19/09/2013	FI	All	Revision
1.010	12/11/2014	FI	All	Software changed (v1.100)

**WARNING:**

ADFweb.com reserves the right to change information in this manual about our product without warning. ADFweb.com is not responsible for any error this manual may contain.

**TRADEMARKS:**

All trademarks mentioned in this document belong to their respective owners.

**SECURITY ALERT:****GENERAL INFORMATION**

To ensure safe operation, the device must be operated according to the instructions in the manual. When using the device, legal and safety regulation are required for each individual application. The same applies also when using accessories.

**INTENDED USE**

Machines and systems must be designed so the faulty conditions do not lead to a dangerous situation for the operator (i.e. independent limit switches, mechanical interlocks, etc.).

**QUALIFIED PERSONNEL**

The device can be used only by qualified personnel, strictly in accordance with the specifications. Qualified personnel are persons who are familiar with the installation, assembly, commissioning and operation of this equipment and who have appropriate qualifications for their job.

**RESIDUAL RISKS**

The device is state-of-the-art and is safe. The instruments can represent a potential hazard if they are inappropriately installed and operated by untrained personnel. These instructions refer to residual risks with the following symbol:




This symbol indicates that non-observance of the safety instructions is a danger for people that could lead to serious injury or death and / or the possibility of damage.

**CE CONFORMITY**

The declaration is made by our company. You can send an email to [support@adfweb.com](mailto:support@adfweb.com) or give us a call if you need it.

**EXAMPLE OF CONNECTION:**

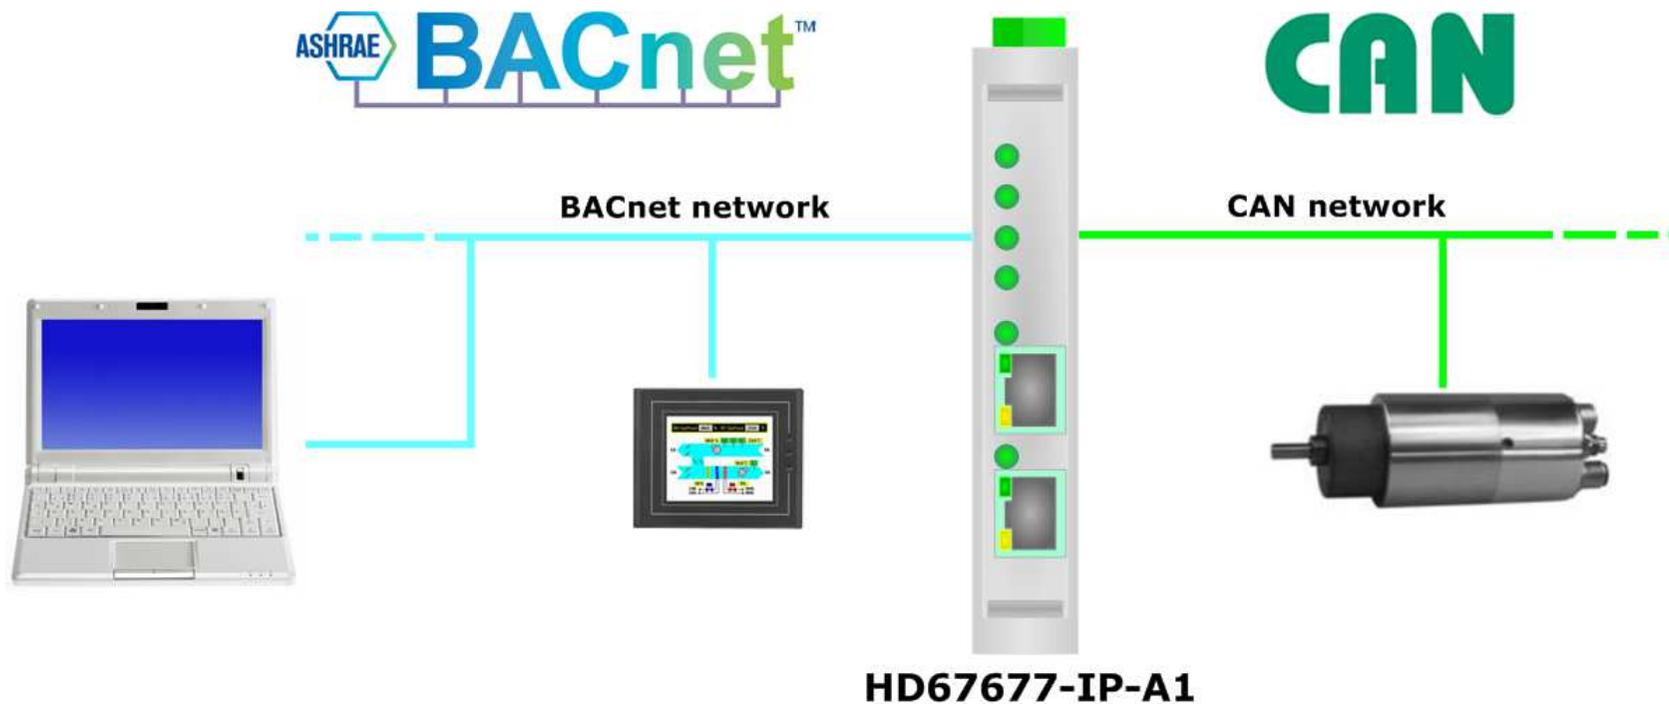

**CONNECTION SCHEME:**

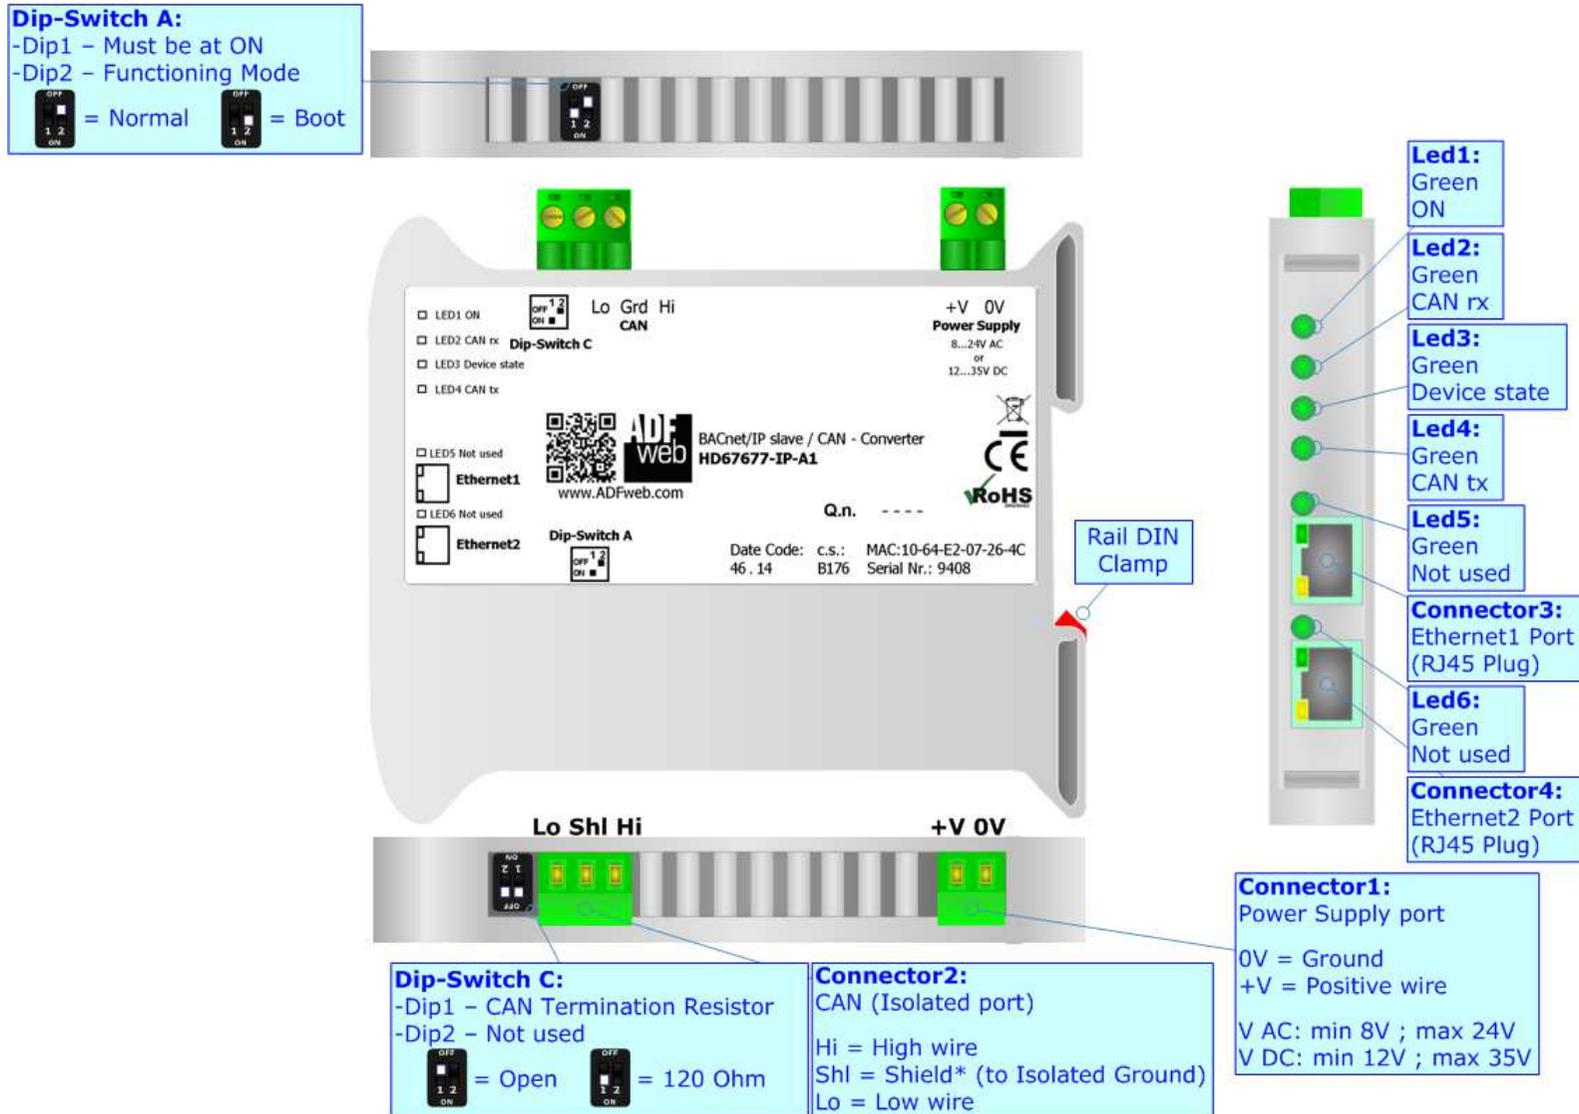


Figure 1a: Connection scheme for HD67677-IP-A1

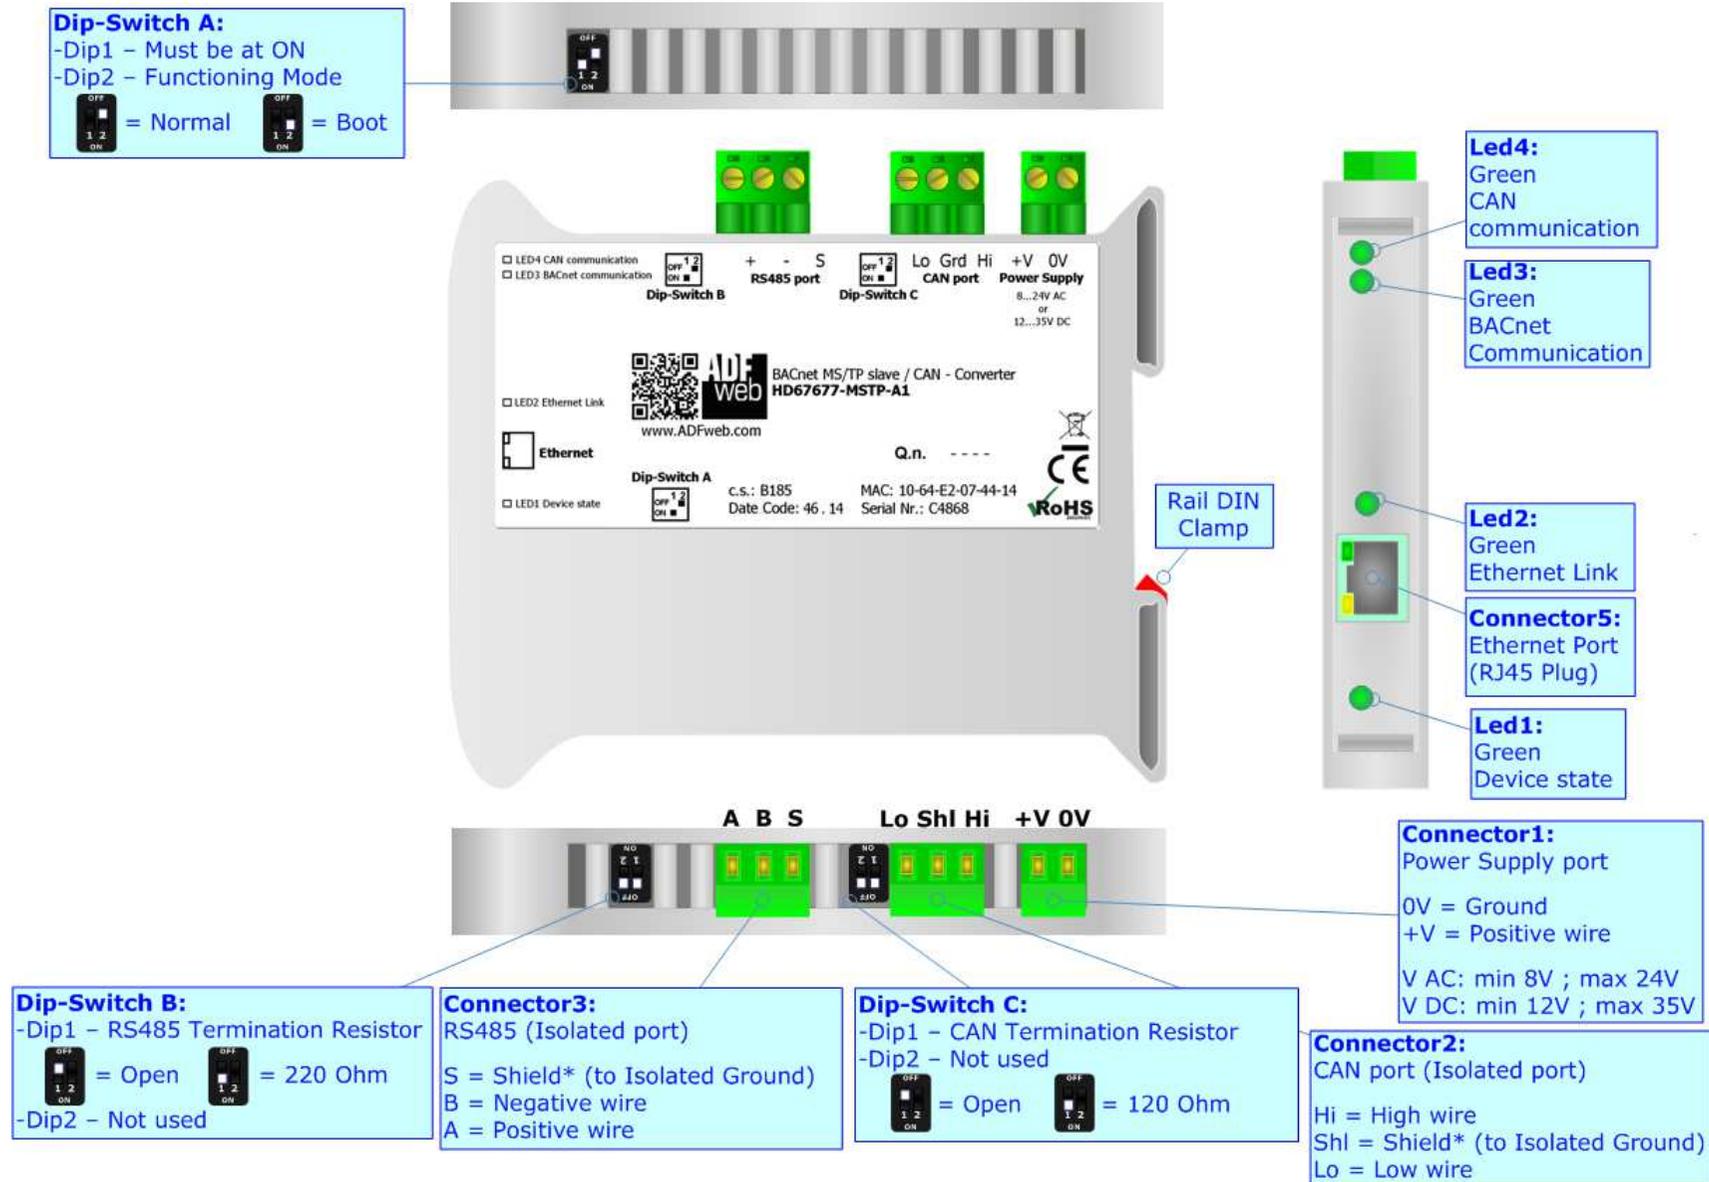


Figure 1b: Connection scheme for HD67677-MSTP-A1

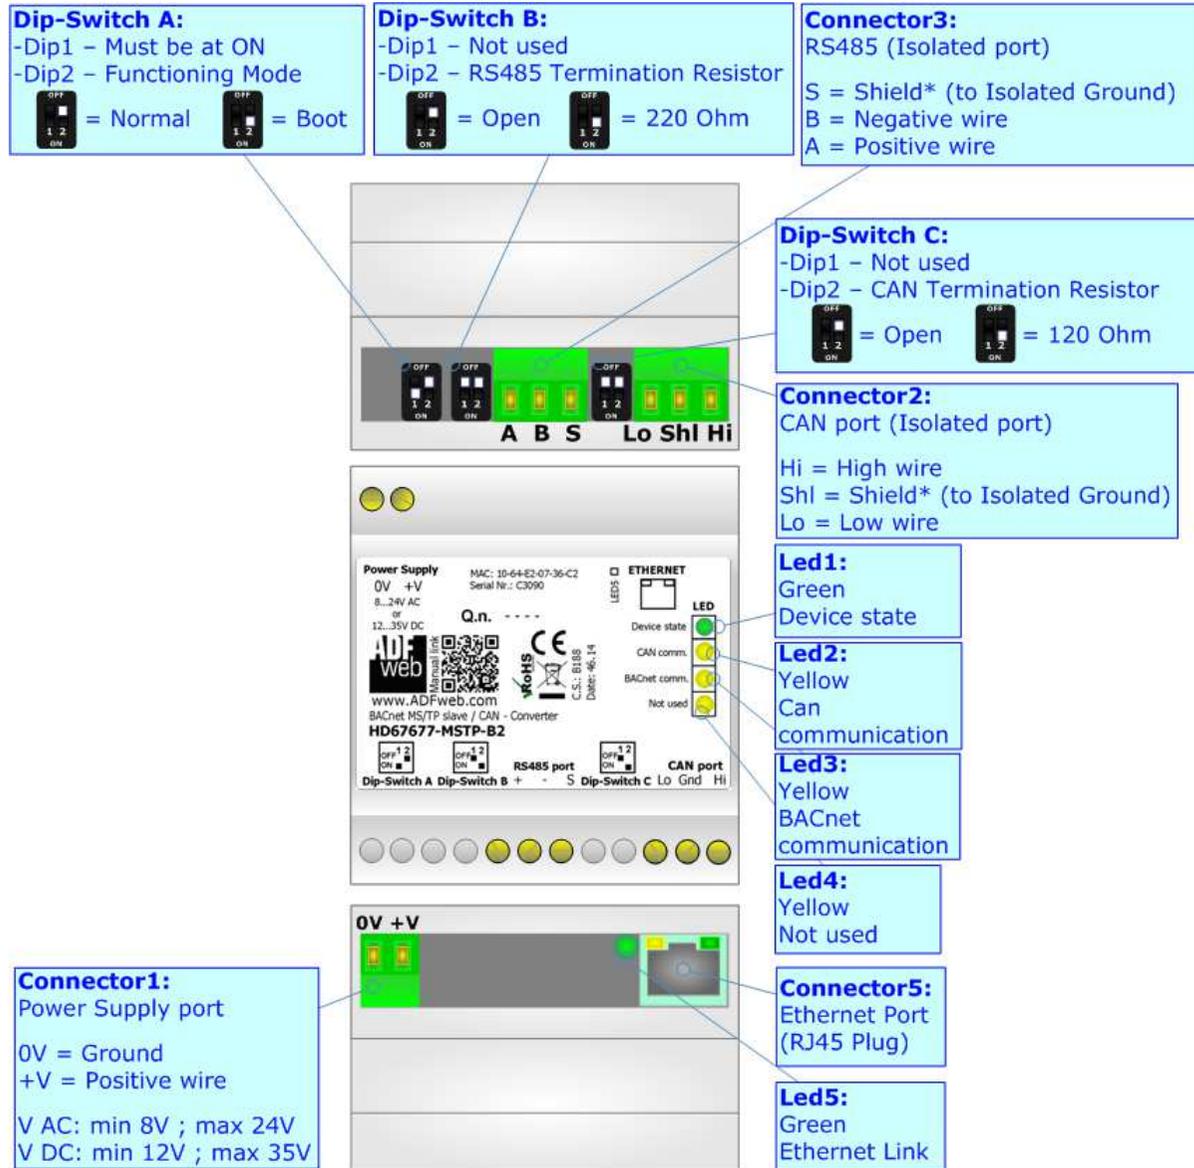


Figure 1c: Connection scheme for HD67677-MSTP-B2

**CHARACTERISTICS:**

The HD67677-IP-A1, HD67677-MSTP-A1 and HD67677-MSTP-B2 are BACnet slave / CAN Converter.

They allows the following characteristics:

- Up to 2000 BACnet objects (Read+Write);
- Up to 500 CAN frames in reading and 500 CAN frames in writing;
- Triple isolation between BACnet - Power Supply, BACnet - CAN, Power Supply - CAN.
- Two-directional information between BACnet and CAN;
- Mountable on 35mm Rail DIN;
- Wide power supply input range: 8...24V AC or 12...35V DC;
- Wide temperature range: -40°C / 85°C [-40°F / +185°F].

**CONFIGURATION:**

You need Compositor SW67677 software on your PC in order to perform the following:

- Define the parameter of BACnet line;
- Define the parameter of CAN line;
- Define CAN frames that the converter can accept;
- Define CAN frames that the converter can send;
- Define BACnet objects that contains the data sent by CAN;
- Define BACnet objects that contains the data to sent to the CAN;
- Update the device.

**POWER SUPPLY:**

The devices can be powered at 8...24V AC and 12...35V DC. For more details see the two tables below.

VAC		VDC	
Vmin	Vmax	Vmin	Vmax
8V	24V	12V	35V


Consumption at 24V DC:

Device	Consumption [W/VA]
HD67677-IP-A1	3.5
HD67677-MSTP-A1	3.5
HD67677-MSTP-B2	3.5

**Connector1:**  
Power Supply port  
0V = Ground  
+V = Positive wire  
V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V




**Connector1:**  
Power Supply port  
0V = Ground  
+V = Positive wire  
V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V

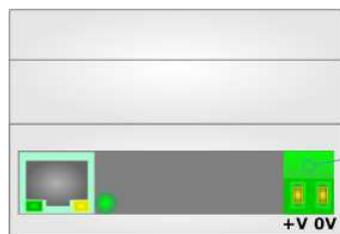


**Connector1:**  
Power Supply port  
0V = Ground  
+V = Positive wire  
V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V

**Caution: Not reverse the polarity power**

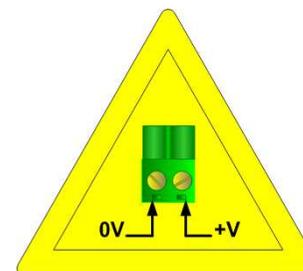

HD67677-IP-A1  
HD67677-MSTP-A1

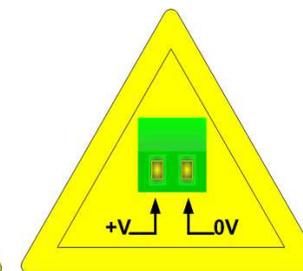

HD67677-MSTP-B2


**FUNCTION MODES:**

The device has got two functions mode depending of the position of the 'Dip2 of Dip-Switch A':

- The first, with 'Dip2 of Dip-Switch A' at "OFF" position, is used for the normal working of the device.
- The second, with 'Dip2 of Dip-Switch A' at "ON" position, is used for upload the Project and/or Firmware.

For the operations to follow for the updating, see 'UPDATE DEVICE' section.

According to the functioning mode, the LEDs will have specifics functions, see 'LEDS' section.

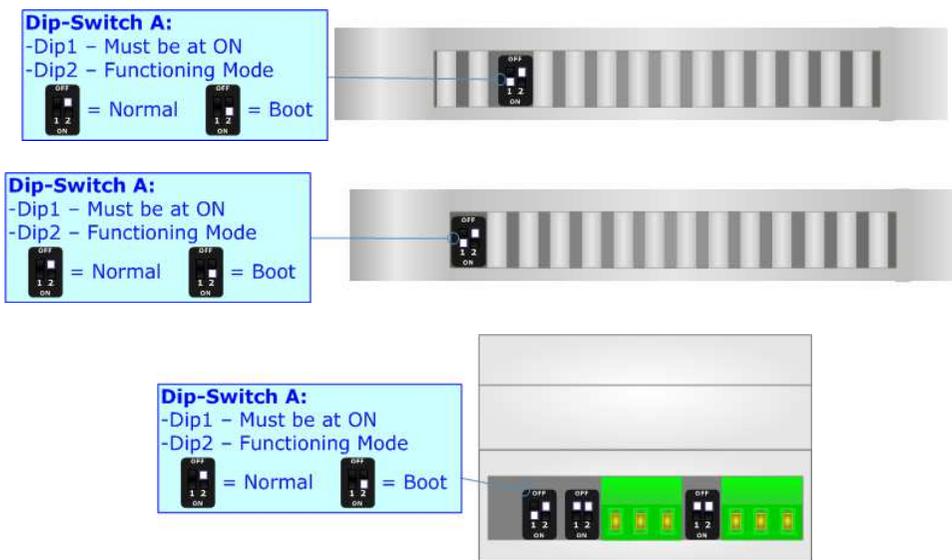

**Warning:**


Dip1 of 'Dip-Switch A' must be at ON position for working even if the Ethernet cable isn't inserted.

**LEDS:**

HD67677-IP-A1

The device has got six LEDs that are used to give information of the functioning status.  
The various meanings of the LEDs are described in the table below.


LED	Normal Mode	Boot Mode
1: ON	<b>ON:</b> Device powered <b>OFF:</b> Device not powered	<b>ON:</b> Device powered <b>OFF:</b> Device not powered
2: CAN rx	Blinks quickly when receiving CAN frames defined in the section "Receive Frames" of Compositor	<b>Blinks quickly:</b> Boot state <b>Blinks very slowly (~0.5Hz):</b> update in progress
3: Device State	Blinks slowly (~1Hz)	<b>Blinks quickly:</b> Boot state <b>Blinks very slowly (~0.5Hz):</b> update in progress
4: CAN tx	Blinks quickly when transmits CAN frames defined in the section "Transmit Frames" of Compositor	<b>Blinks quickly:</b> Boot state <b>Blinks very slowly (~0.5Hz):</b> update in progress
5: Not used	OFF	<b>Blinks quickly:</b> Boot state <b>Blinks very slowly (~0.5Hz):</b> update in progress
6: Not used	OFF	<b>Blinks quickly:</b> Boot state <b>Blinks very slowly (~0.5Hz):</b> update in progress

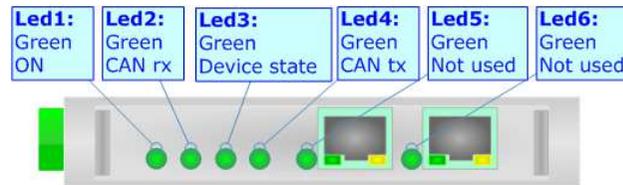

HD67677-MSTP-A1

The device has four LEDs that are used to give information of the functioning status.  
The various meanings of the LEDs are described in the table below.


LED	Normal Mode	Boot Mode
1: Device State	Blinks slowly (~1Hz)	<b>Blinks quickly:</b> Boot state <b>Blinks very slowly (~0.5Hz):</b> update in progress
2: Link Ethernet	<b>ON:</b> Ethernet cable connected <b>OFF:</b> Ethernet cable disconnected	<b>ON:</b> Ethernet cable connected <b>OFF:</b> Ethernet cable disconnected
3: BACnet communication	Blinks quickly when receive a BACnet request	<b>Blinks quickly:</b> Boot state <b>Blinks very slowly (~0.5Hz):</b> update in progress
4: CAN Communication	Blinks quickly when receive CAN frames defined in the section "Receive Frames" of Compositor	<b>Blinks quickly:</b> Boot state <b>Blinks very slowly (~0.5Hz):</b> update in progress

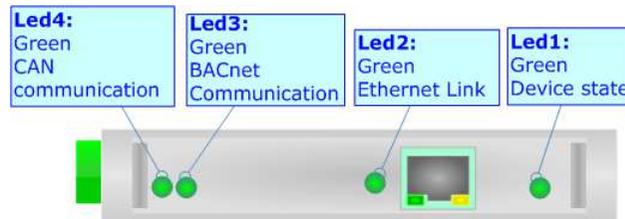

**HD67677-MSTP-B2**



The device has five LEDs that are used to give information of the functioning status.  
The various meanings of the LEDs are described in the table below.

LED	Normal Mode	Boot Mode
1: Device State	Blinks slowly (~1Hz)	<b>Blinks quickly:</b> Boot state <b>Blinks very slowly (~0.5Hz):</b> update in progress
2: CAN Communication	Blinks quickly when receive CAN frames defined in the section "Receive Frames" of Compositor	<b>Blinks quickly:</b> Boot state <b>Blinks very slowly (~0.5Hz):</b> update in progress
3: BACnet communication	Blinks quickly when receive a BACnet request	<b>Blinks quickly:</b> Boot state <b>Blinks very slowly (~0.5Hz):</b> update in progress
4: Not used	Off	<b>Blinks quickly:</b> Boot state <b>Blinks very slowly (~0.5Hz):</b> update in progress
5: Link Ethernet	<b>ON:</b> Ethernet cable connected <b>OFF:</b> Ethernet cable disconnected	<b>ON:</b> Ethernet cable connected <b>OFF:</b> Ethernet cable disconnected

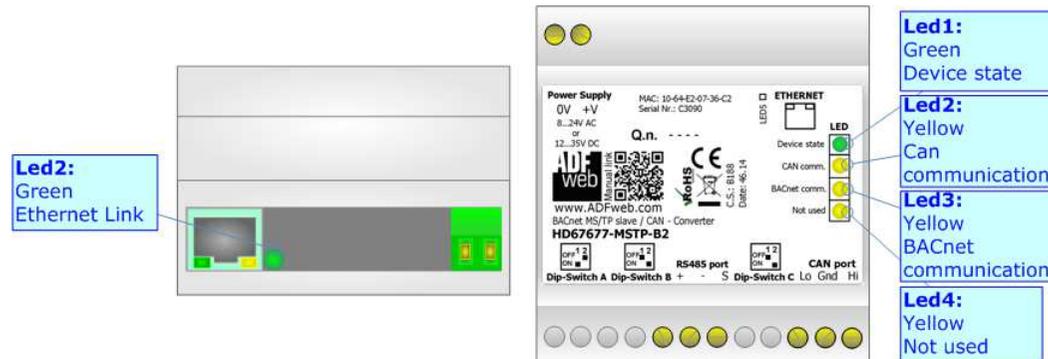


**CAN:**

For terminating the CAN line with a 120Ω resistor it is necessary to put Dip1 of 'Dip-Switch C' (for codes HD67677-IP-A1 and HD67677-MSTP-A1) or Dip2 of 'Dip-Switch C' (for code HD67677-MSTP-B2) at ON position.

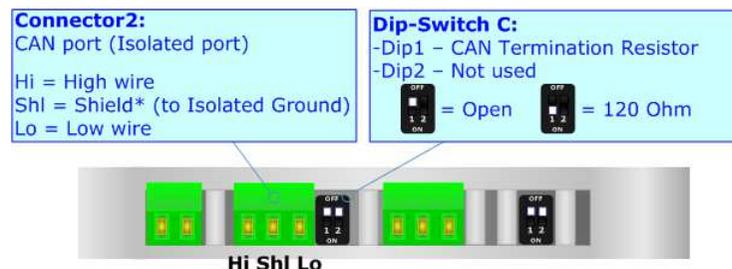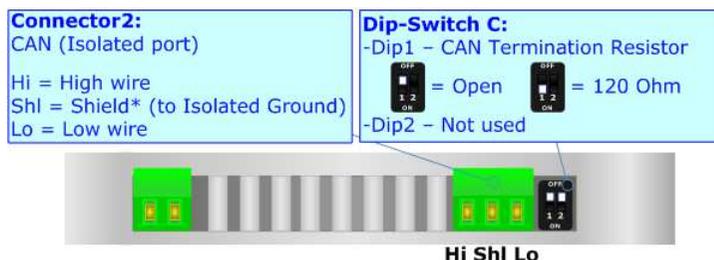

Cable characteristics:


<b>DC parameter:</b>	Impedance	70 Ohm/m
<b>AC parameters:</b>	Impedance	120 Ohm/m
	Delay	5 ns/m
<b>Length</b>	<b>Baud Rate [bps]</b>	<b>Length MAX [m]</b>
	10 K	5000
	20 K	2500
	50 K	1000
	100 K	650
	125 K	500
	250 K	250
	500 K	100
	800 K	50
	1000 K	25

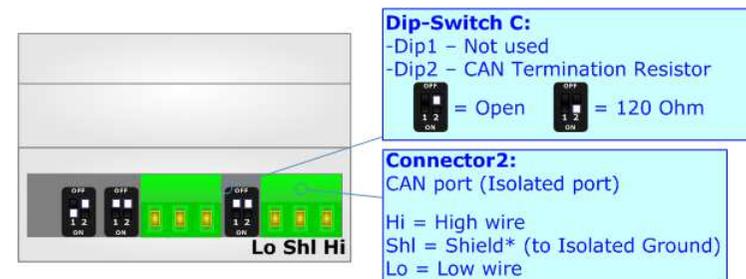

**ETHERNET:**


HD67677-IP-A1

The Ethernet ports are used for BACnet/IP communication and for programming the device.  
 The BACnet/IP connection must be made using Connector3 and/or Connector4 of HD67677-IP-A1 with at least a Category 5E cable.  
 The maximum length of the cable should not exceed 100m. The cable has to conform to the T568 norms relative to connections in cat.5 up to 100 Mbps. To connect the device to an Hub/Switch is recommended the use of a straight cable, to connect the device to a PC/PLC/other is recommended the use of a cross cable.

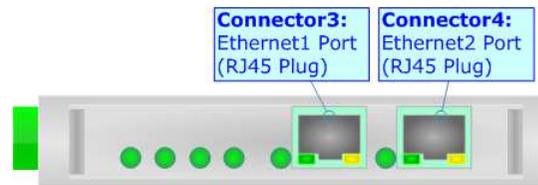

HD67677-MSTP-A1, HD67677-MSTP-B2

The Ethernet port is used for programming the device.  
 The Ethernet connection must be made using Connector5 of HD67677-MSTP-A1 or HD67677-MSTP-B2 with at least a Category 5E cable. The maximum length of the cable should not exceed 100m. The cable has to conform to the T568 norms relative to connections in cat.5 up to 100 Mbps. To connect the device to an Hub/Switch is recommended the use of a straight cable, to connect the device to a PC/PLC/other is recommended the use of a cross cable.

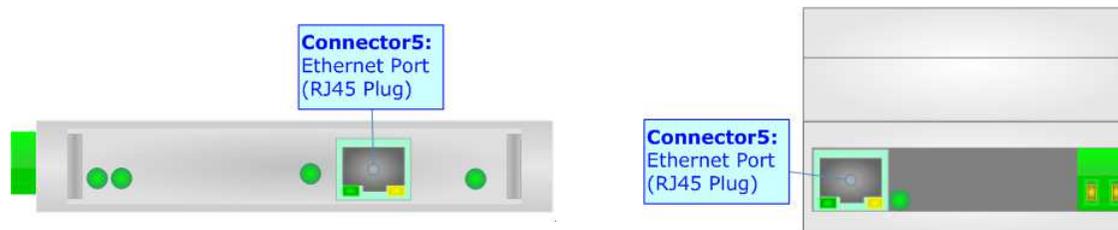

**RS485:**

The RS485 port is present only for the BACnet MS/TP devices (HD67677-MSTP-A1 and HD67677-MSTP-B2).

For terminating the CAN line with a 220Ω resistor it is necessary to put Dip1 of 'Dip-Switch B' (for code and HD67677-MSTP-A1) or Dip2 of 'Dip-Switch B' (for code HD67677-MSTP-B2) at ON position.



The maximum length of the cable should be 1200m (4000 feet).

Here some codes of cables:

- Belden: p/n 8132 - 2x 28AWG stranded twisted pairs conductor + foil shield + braid shield;
- Belden p/n 82842 - 2x 24AWG stranded twisted pairs conductor + foil shield + braid shield;
- Tasker: p/n C521 - 1x 24AWG twisted pair conductor + foil shield + braid shield;
- Tasker: p/n C522 - 2x 24AWG twisted pairs conductor + foil shield + braid shield.

**USE OF COMPOSITOR SW67677:**

To configure the Converter, use the available software that runs with Windows called SW67677. It is downloadable from the site [www.adfweb.com](http://www.adfweb.com) and its operation is described in this document (*this manual is referenced to the last version of the software present on our web site*). The software works with MSWindows (XP, Vista, Seven, 8; 32/64bit).

When launching the SW67677, the window below appears (Fig. 2).

 Note:  
It is necessary to have installed .Net Framework 4.


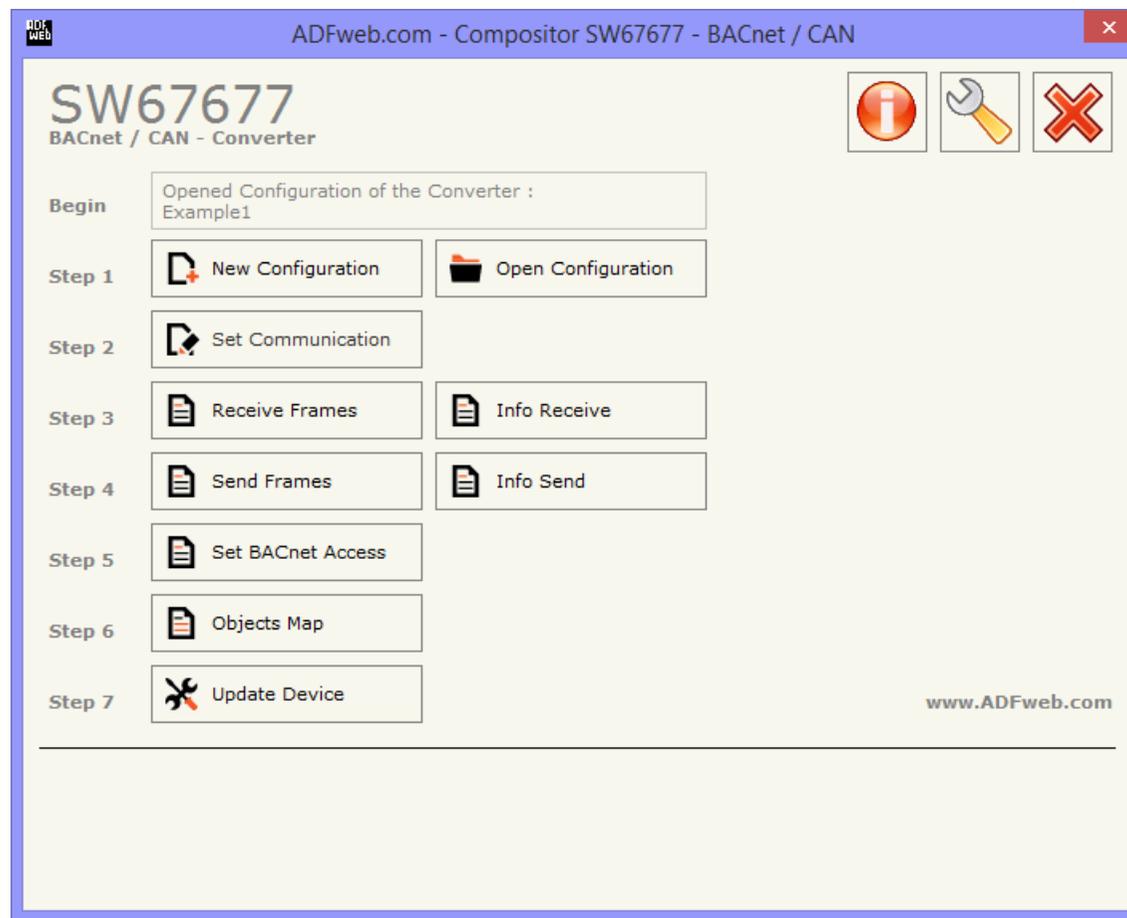


Figure 2: Main window for SW67677


**NEW CONFIGURATION / OPEN CONFIGURATION:**

The “**New Configuration**” button creates the folder which contains the entire device’s configuration.

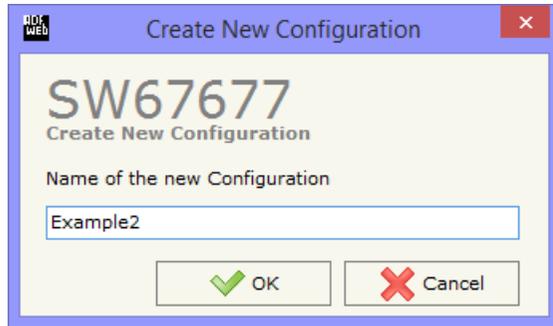

A device’s configuration can also be imported or exported:


- To clone the configurations of a Programmable “BACnet slave / CAN - Converter” in order to configure another device in the same manner, it is necessary to maintain the folder and all its contents;
- To clone a project in order to obtain a different version of the project, it is sufficient to duplicate the project folder with another name and open the new folder with the button “**Open Configuration**”.

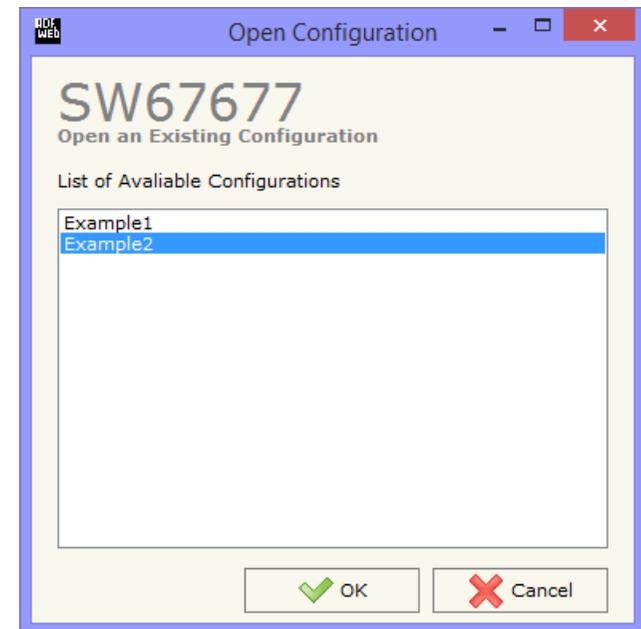

**SOFTWARE OPTIONS:**

By pressing the “**Settings**” () button there is the possibility to change the language of the software and check the updatings for the compositor.

In the section “Language” it is possible to change the language of the software.

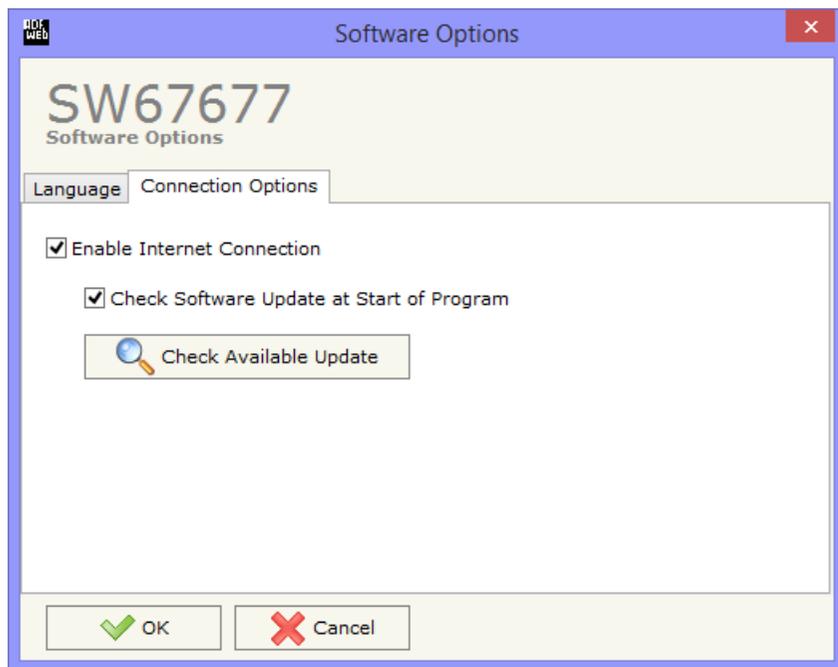

In the section “Connection Options”, it is possible to check if there are some updatings of the software compositor in ADFweb.com website. Checking the option “**Check Software Update at Start of Program**”, the SW67677 check automatically if there are updatings when it is launched.

## SET COMMUNICATION:

This section define the fundamental communication parameters of two buses, BACnet and CAN.

By Pressing the **"Set Communication"** button from the main window for SW67677 (Fig. 2) the window "Set Communication" appears (Fig. 3).

The window is divided in three sections, one for selecting the type of BACnet (in relation to the device bought), one for the BACnet parameters and the other for the CAN parameters.

In the section "BACnet Type" is possible to select the type of BACnet to use from:

- BACnet/IP (uses ethernet);
- BACnet MS/TP (uses RS485);
- BACnet PTP (uses RS232).

If selected "BACnet/IP" the means of the fields for "BACnet" are:

- In the fields **"IP ADDRESS"** insert the IP address that you want to give to the Converter;
- In the fields **"SUBNET Mask"** insert the SubNet Mask;
- In the fields **"GATEWAY"** insert the default gateway that you want to use. This feature can be enabled or disabled pressing the Check Box field. This feature is used for going out of the net;
- In the field **"Port"** the port number used for BACnet communication is defined. The default port used for BACnet communication is 47808, but is possible to insert any value (except 10000 and 10001);
- In the field **"BACnet Device Name"** is possible to assign a name to the BACnet node;
- In the field **"Device Identifier"** is possible to assign a number to the BACnet node (Used for the Device Identifier).

The means of the fields for the "CAN" section are:

- In the field **"Baudrate"** it is possible to select the baudrate of the CAN line.

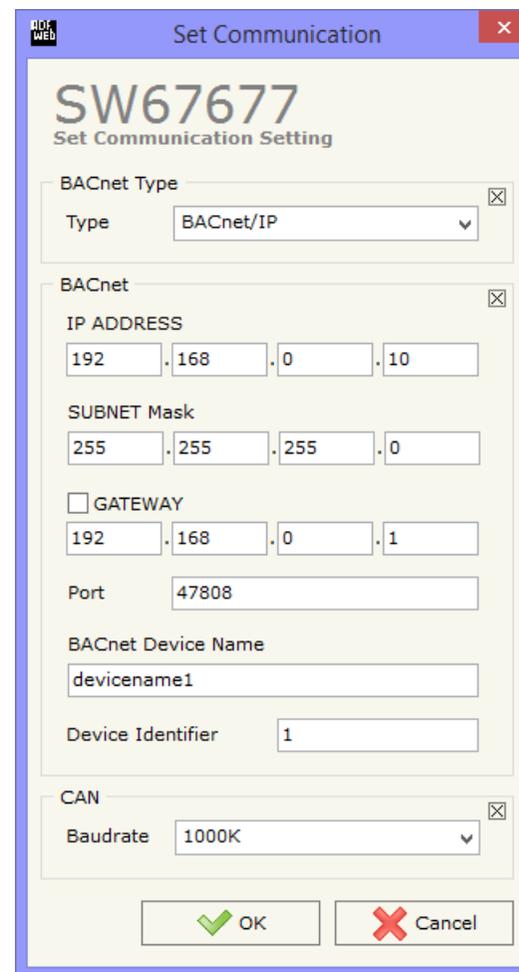


Figure 3: "Set Communication" window

If selected "BACnet MS/TP" the means of the fields for "BACnet" are:

- In the field "**Baudrate**" it is possible to select the baudrate of the BACnet (9600, 19200, 38400, 57600, 76800, 115200);
- In the field "**Parity**" it is possible to select the parity of the line (None, Odd, Even);
- In the field "**BACnet Device Name**" is possible to insert the name to give to the BACnet node (maximum 17 characters);
- In the field "**MAC Address**" is possible to define the MAC of BACnet node (from 0 to 254);


If selected "BACnet PTP" the means of the fields for "BACnet" are:

- In the field "**Baudrate**" it is possible to select the baudrate of the BACnet line (9600, 19200, 38400, 57600, 76800, 115200);
- In the field "**Parity**" it is possible to select the parity of the line (None, Odd, Even);
- In the field "**BACnet Device Name**" is possible to insert the name to give to the BACnet node (maximum 17 characters);

The means of the fields for the "Ethernet Update" section are:

- In the fields "**IP ADDRESS**" insert the IP address that you want to give to the Converter;
- In the fields "**SUBNET Mask**" insert the SubNet Mask;
- In the fields "**GATEWAY**" insert the default gateway that you want to use. This feature can be enabled or disabled pressing the Check Box field. This feature is used for going out of the net.

These information are used for programming the Converter.

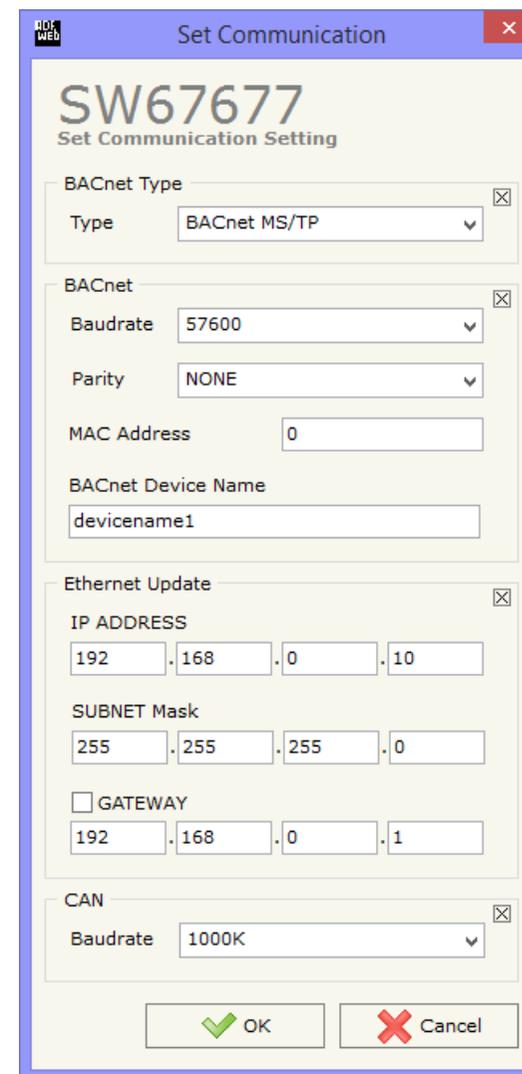

**SW67677**  
Set Communication Setting

BACnet Type  
Type: BACnet MS/TP

BACnet  
Baudrate: 57600  
Parity: NONE  
MAC Address: 0  
BACnet Device Name: devicename1

Ethernet Update  
IP ADDRESS: 192 . 168 . 0 . 10  
SUBNET Mask: 255 . 255 . 255 . 0  
 GATEWAY: 192 . 168 . 0 . 1

CAN  
Baudrate: 1000K

OK Cancel

**RECEIVE FRAMES:**

By pressing the "Receive Frames" button from the main window for SW67677 (Fig. 2) the "Receive CAN Frames" window appears (Fig. 4).

The COB inserted in this table contains the data readable by the BACnet master. These frames are accepted by the Converter.

The data of the columns have the following meanings:

- In the field "Cob-ID" insert the COB of the CAN frame;
- In the field "Type" is possible to select which type of CAN packet use for this Cob-ID; or 2.0A (11 bits) or 2.0B (29 bits);
- In the field "Dimension" insert the number of byte of the COB (from 1 to 8);
- The field "TimeOut" is used for put at zero the data into BACnet if the CAN frame don't arrives with a frequency less than the time expressed in the field. If the value in the field is 0, means that you don't want to use this feature, and so the value is never deleted;
- In the field "Mnemonic" it is possible to insert a brief description.

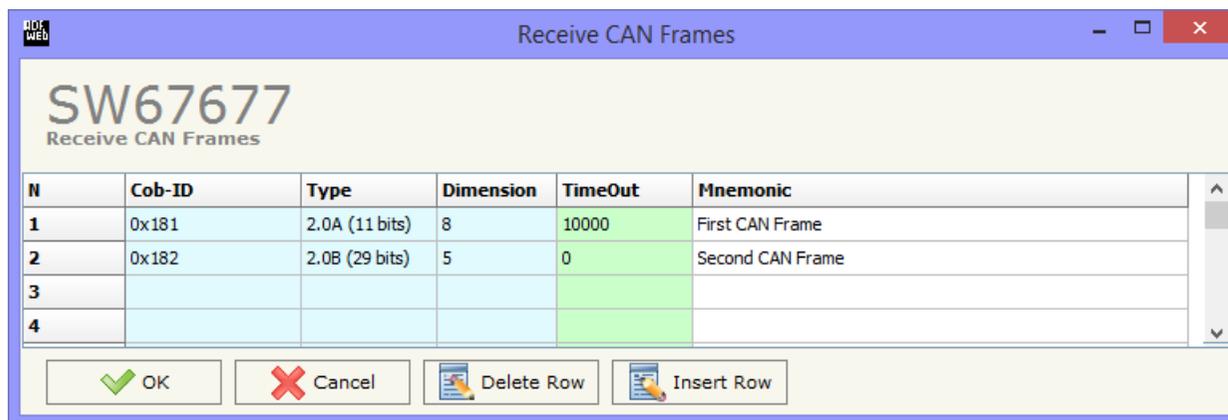


Figure 4: "Receive CAN Frames" window

**INFO RECEIVE:**

By pressing the "Info Receive" button from the main window for SW67677 (Fig. 2) the "Receive CAN Frames Info" window appears (Fig. 5).

- In the "COB ID" field there are the COB ID that you have inserts in the "Receive CAN Frames" window;
- In the "Bytes" field select the correspondence of the byte in BACnet.

For example:

Byte 1 of frame CAN go to byte 0 in BACnet: the first byte of CAN frame is 0x11 in the byte 0 of BACnet I can read 0x11.

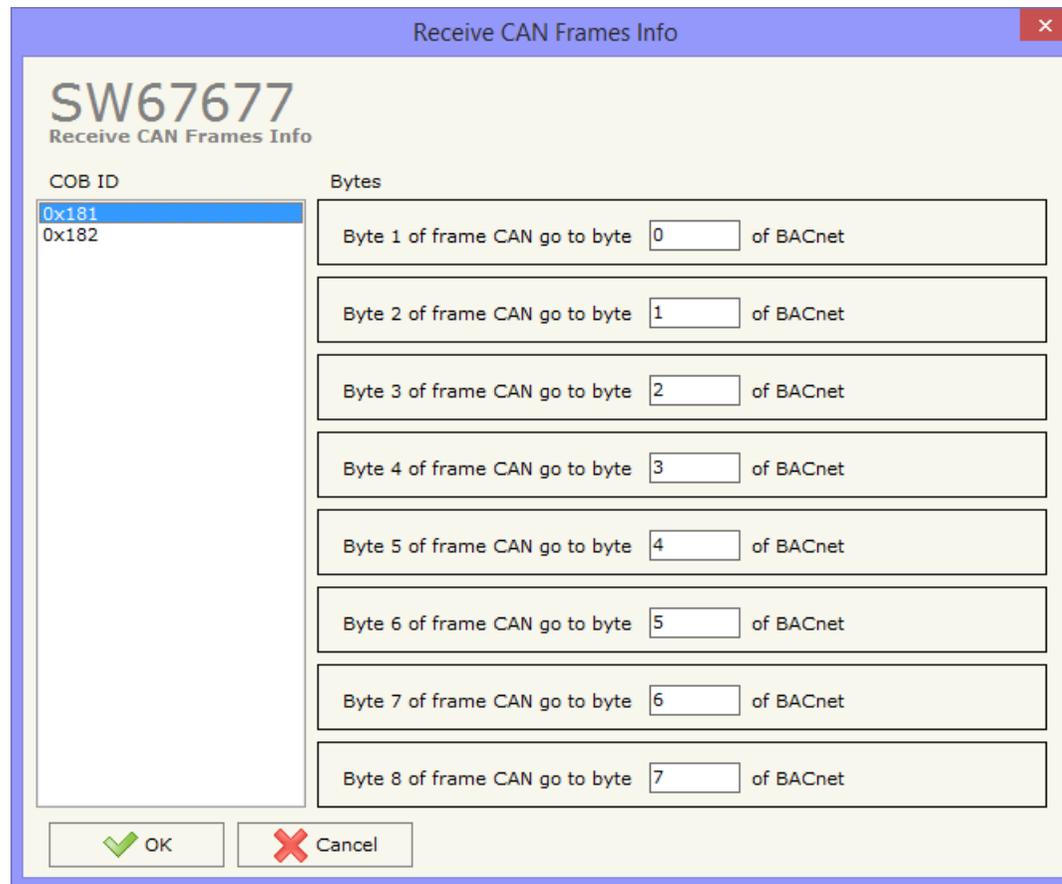


Figure 5: "Receive CAN Frames Info" window

**SEND FRAMES:**

By pressing the "Send Frames" button from the main window for SW67677 (Fig. 2) the "Send CAN frames" window appears (Fig. 6).

The COB inserted in this table contains the data writeable by BACnet. These frames are sent by the Converter.

The data of the columns have the following meanings:

- In the field "Cob-ID" insert the COB of the CAN frame;
- In the field "Type" is possible to select which type of CAN packet use for this Cob-ID; or 2.0A (11 bits) or 2.0B (29 bits);
- In the field "Dimension" insert the number of byte of the COB (from 1 to 8);
- In the field "Send Frame Type" is possible to select when send the CAN frame. There are two options: the first is "On Data Change", the frame is sent when the data changes; the second is "On Times" and the frame is send cyclically;
- In the field "Timer Send" insert the interval used for the "Send Frame Type On Times". The time is in milliseconds;
- In the field "Mnemonic" it is possible to insert a brief description.

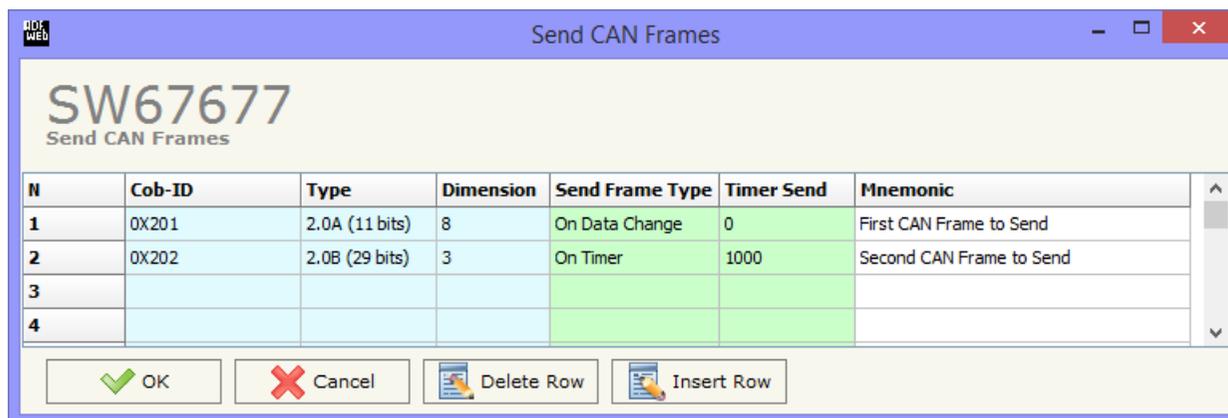


Figure 6: "Send CAN Frames" window

**INFO SEND:**

By pressing the "Info Send" button from the main window for SW67677 (Fig. 2) the "Send CAN Frames Info" window appears (Fig. 7).

- In the "COB ID" field there are the COB ID that you have inserts in the "Send CAN frames" window;
- In the field "Bytes" select the correspondence of the byte in BACnet.

For example:

Byte 1 of frame CAN is byte 0 in BACnet: the byte 0 of BACnet is 0x22, the first byte of CAN frame with COB=0x201 will be 0x22.

COB ID	Bytes
0X201	Byte 1 of frame CAN is the byte <input type="text" value="0"/> of BACnet
0X202	Byte 2 of frame CAN is the byte <input type="text" value="1"/> of BACnet
	Byte 3 of frame CAN is the byte <input type="text" value="2"/> of BACnet
	Byte 4 of frame CAN is the byte <input type="text" value="3"/> of BACnet
	Byte 5 of frame CAN is the byte <input type="text" value="4"/> of BACnet
	Byte 6 of frame CAN is the byte <input type="text" value="5"/> of BACnet
	Byte 7 of frame CAN is the byte <input type="text" value="6"/> of BACnet
	Byte 8 of frame CAN is the byte <input type="text" value="7"/> of BACnet

Figure 7: "Send Frames Info" window

**SET BACNET ACCESS:**

By Pressing the "Set BACnet Access " button from the main window for SW67677 (Fig. 2) the window "BACnet Set Access" appears (Fig. 8).

The window is divided in two parts, the "BACnet in Read" that contains the BACnet objects readable by a BACnet master (the CAN data associated to these objects arrives to the converter); and "BACnet in write" that contains the BACnet objects writeable by a BACnet master (the CAN data associated to these objects are sent by the Converter).


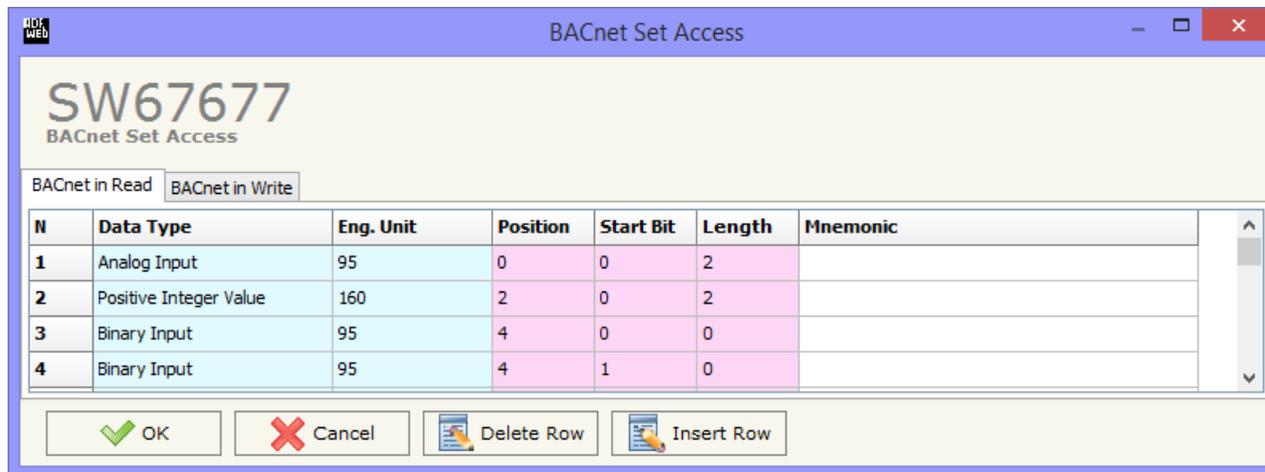


Figure 8: "BACnet Set Access" window



The meaning of the fields in the window are the follows:

- In the field "**Data Type**" is possible to select the BACnet object data type;
- In the field "**Eng. Unit**", with double click the window "*Select the BACnet Engineering Unit*" appears (Fig. 9);
- In the field "**Position**" is possible to select the position where take/save the data from a 6000 bytes array;
- The field "**Start Bit**" is used for the "Binary In" and "Binary Out" BACnet objects;
- The field "**Length**" is used for all the others BACnet objects.

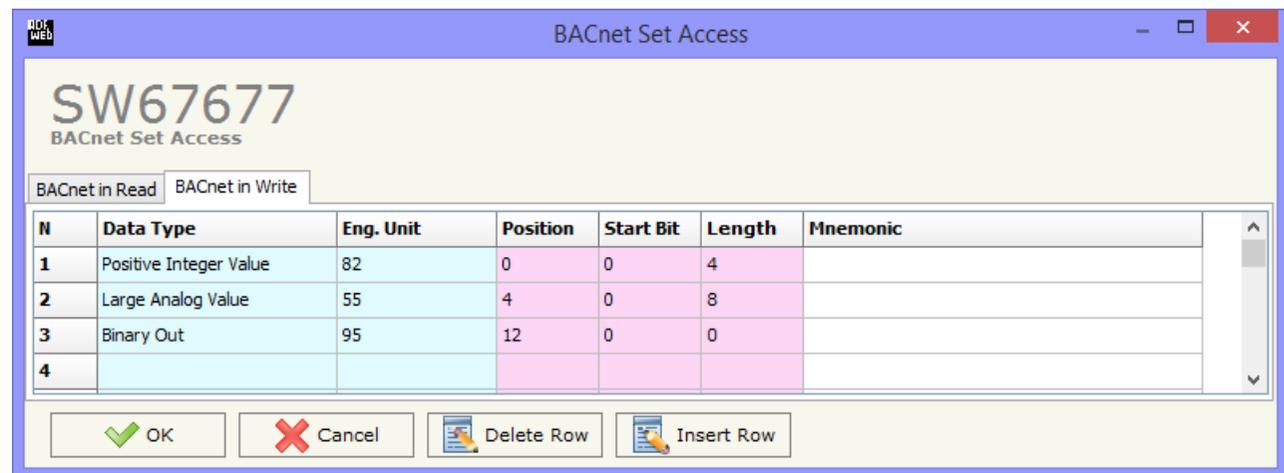

Notes:

On "BACnet in Write" the dimensions (Length) of the variable is fixed. 'Analog Output' occupies 4 bytes, 'Positive Integer Value' occupies 4 bytes, 'Large Analog Value' occupies 8 bytes and 'Binary Out' occupies 1 byte.

The "BACnet in Write" object are also readable.

For write the data, using 'Present\_Value' property, is necessary to use the Type 'Real' for the 'Analog Output', Type 'Double' for the 'Large Analog Value', Type 'Unsigned' for the 'Positive Integer Value' and Type 'Enumerated' for the 'Binary Output'.

The "Mnemonic" field is readable like 'Object\_Name' and 'Description' property of BACnet variable.

Is possible to insert directly the Unit (using its unique number) by compiling the **“Selected BACnet Engineering Unit”** field; or by selecting with the fields **“Select the Type”** and **“Select unit”** the Type/Unit desired. If the second way is used, is necessary to press the **“Select Engineering Unit”** button for confirm the choice.

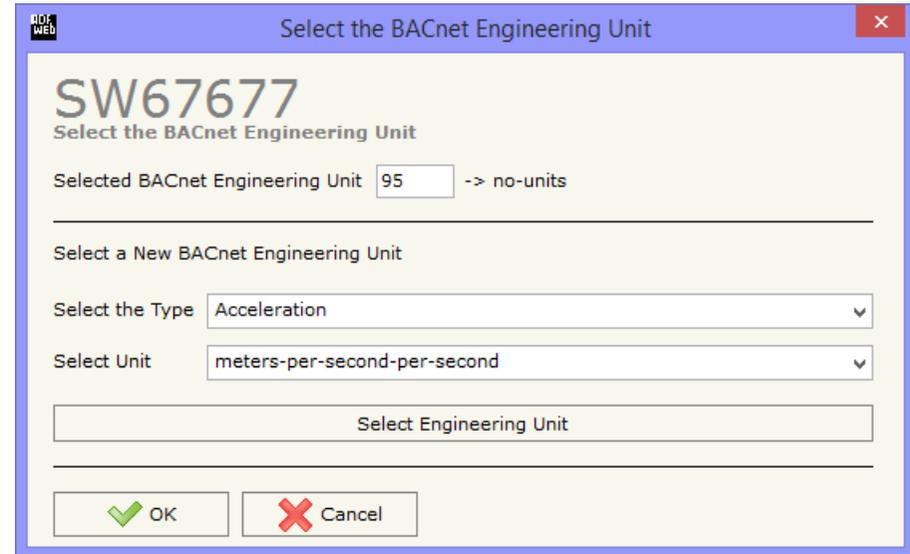


Figure 9: "Select the BACnet Engineering Unit" window

**OBJECTS MAP:**

By Pressing the **“Objects Map”** button from the main window for SW67677 (Fig. 2) is possible to create a .csv document with the map of BACnet Objects.

**UPDATE DEVICE:**

By pressing the **“Update Device”** button, it is possible to load the created configuration into the device; and also the Firmware, if necessary.

If you don't know the actual IP address of the device you have to use this procedure:

- Turn off the Device;
- Put Dip2 of 'Dip-Switch A' in ON position;
- Turn on the device
- Connect the Ethernet cable;
- Insert the IP **“192.168.2.205”**;
- Press the **“Ping”** button, “Device Found! must appear”;
- Press the **“Next”** button;
- Select which operations you want to do;
- Press the **“Execute update firmware”** button to start the upload;
- When all the operations are “OK” turn off the Device;
- Put Dip2 of 'Dip-Switch A' in OFF position;
- Turn on the device.

At this point the configuration/firmware on the device is correctly updated.



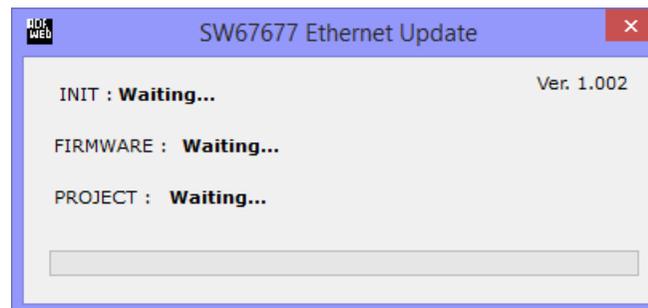


Figure 10: “Update device” windows

If you know the actual IP address of the device, you have to use this procedure:

- Turn on the Device with the Ethernet cable inserted;
- Insert the actual IP of the Converter;
- Press the "**Ping**" button, must appear "Device Found!";
- Press the "**Next**" button;
- Select which operations you want to do;
- Press the "**Execute update firmware**" button to start the upload;
- When all the operations are "OK" the device automatically goes at Normal Mode.

At this point the configuration/firmware on the device is correctly update.

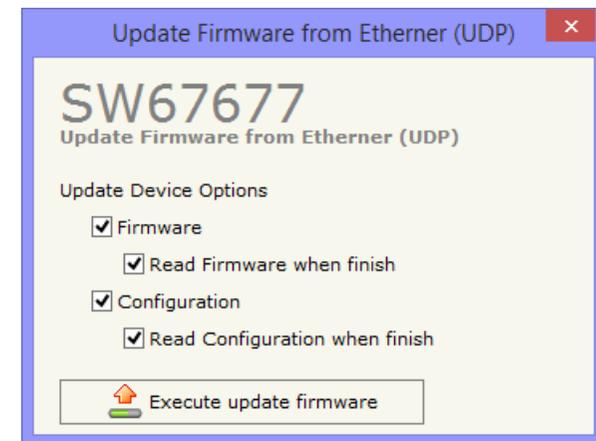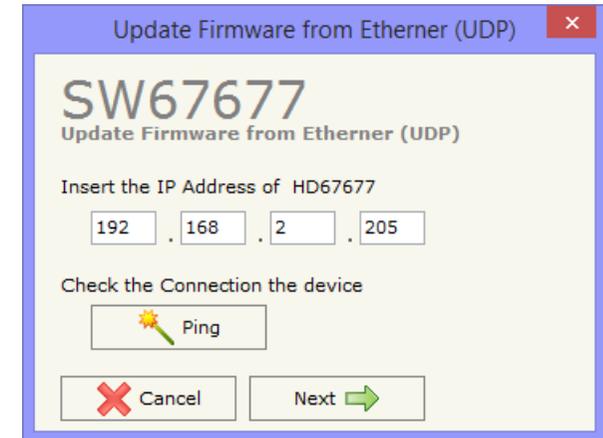

**Note:**

When you install a new version of the software, if it is the first time it is better you do the update of the Firmware in the HD67677 device.



**Note:**

When you receive the device, for the first time, you also have to update the Firmware in the HD67677 device.



**Warning:**

If Fig. 11 appears when you try to do the Update try these points before seeking assistance:

- Try to repeat the operations for the update;
- Try with another PC;
- Try to restart the PC;
- If you are using the program inside a Virtual Machine, try to use it in the main Operating System;
- If you are using Windows Seven or Vista or 8, make sure that you have the administrator privileges;
- Pay attention to the Firewall lock;
- Check the LAN settings.


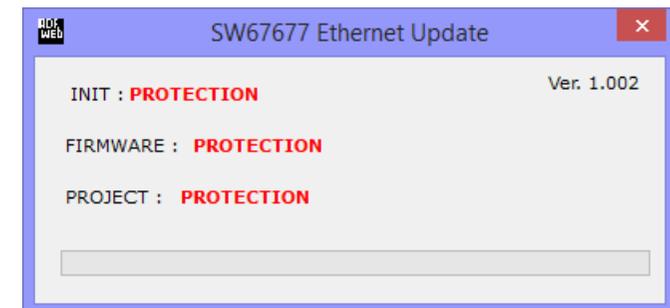


Figure 11: "Protection" window




In the case of HD67677 you have to use the software "SW67677": [www.adfweb.com/download/filefold/SW67677.zip](http://www.adfweb.com/download/filefold/SW67677.zip).

**MECHANICAL DIMENSIONS:**

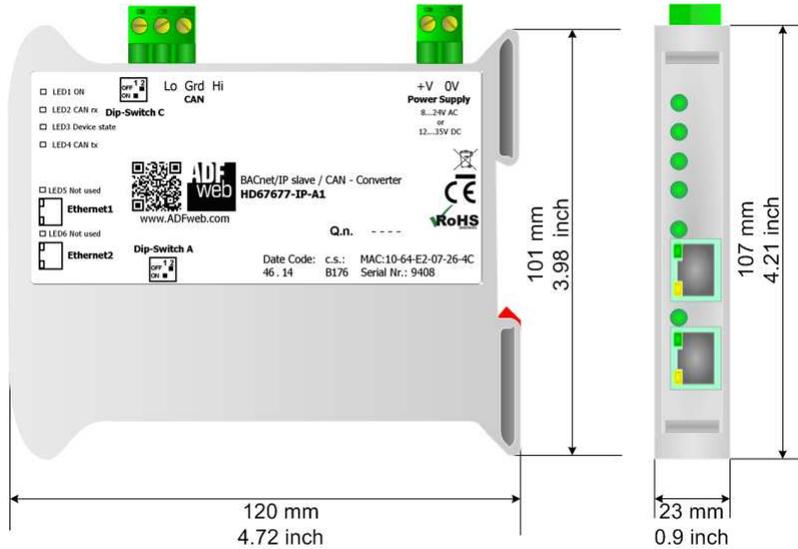


Housing: PVC  
Weight: 200g (Approx)

Figure 12a: Mechanical dimensions scheme for HD67677-IP-A1

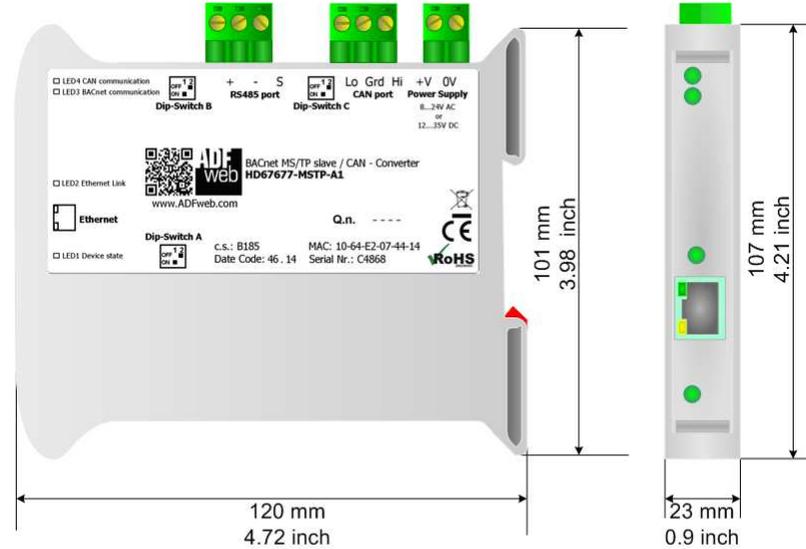

Housing: PVC  
Weight: 200g (Approx)

Figure 12b: Mechanical dimensions scheme for HD67677-MSTP-A1

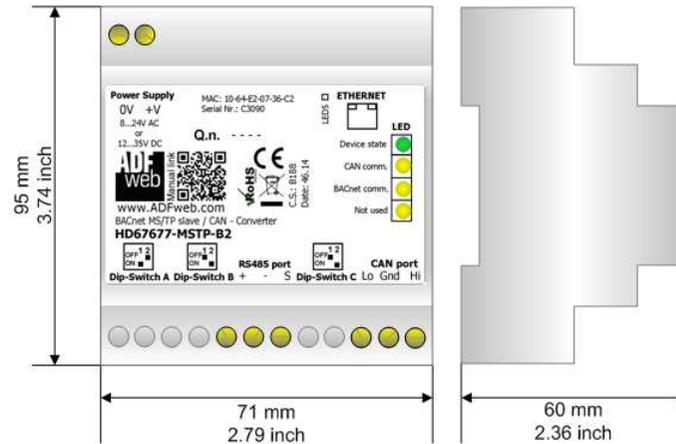


Housing: PVC  
Weight: 200g (Approx)

Figure 12c: Mechanical dimensions scheme for HD67677-MSTP-B2

**ORDERING INFORMATIONS:**

The ordering part number is formed by a valid combination of the following:

**HD67677 - xxx - x x**

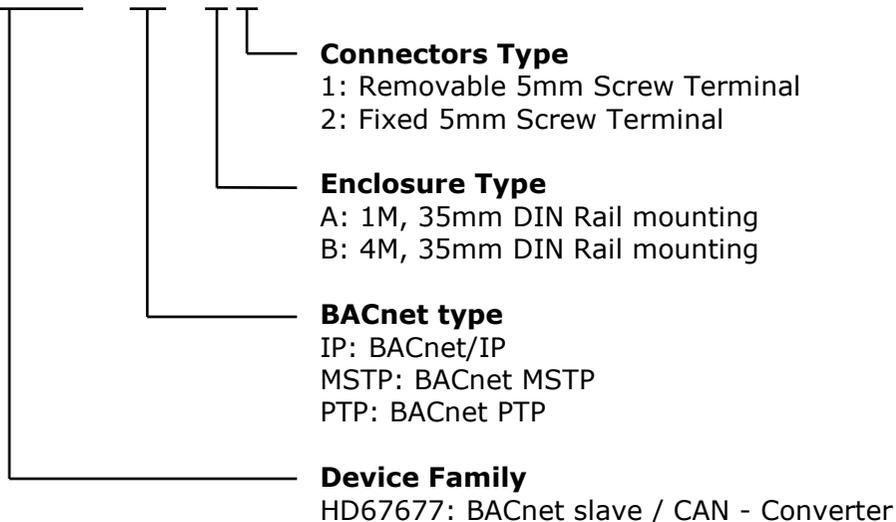

- Order Code: **HD67677-IP-A1** - BACnet/IP slave / CAN - Converter
- Order Code: **HD67677-MSTP-A1** - BACnet MS/TP slave / CAN - Converter
- Order Code: **HD67677-MSTP-B2** - BACnet MS/TP slave / CAN - Converter

**ACCESSORIES:**

- Order Code: **AC34001** - 35mm Rail DIN - Power Supply 220/240V AC 50/60Hz – 12 V AC
- Order Code: **AC34002** - 35mm Rail DIN - Power Supply 110V AC 50/60Hz – 12 V AC

**DISCLAIMER:**

All technical content within this document can be modified without notice. The content of the document is a under continual renewal. For losses due to fire, earthquake, third party access or other accidents, or intentional or accidental abuse, misuse, or use under abnormal conditions repairs are charged to the user. ADFweb.com S.r.l. will not be liable for accidental loss of use or inability to use this product, such as loss of business income. ADFweb.com S.r.l. shall not be liable for consequences of improper use.

**OTHER REGULATIONS AND STANDARDS:****WEEE INFORMATION**

Disposal of old electrical and electronic equipment (as in the European Union and other European countries with separate collection systems).

— This symbol on the product or on its packaging indicates that this product may not be treated as household rubbish. Instead, it should be taken to an applicable collection point for the recycling of electrical and electronic equipment. If the product is disposed correctly, you will help prevent potential negative environmental factors and impact of human health, which could otherwise be caused by inappropriate disposal. The recycling of materials will help to conserve natural resources. For more information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

**RESTRICTION OF HAZARDOUS SUBSTANCES DIRECTIVE**

The device respects the 2002/95/EC Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment (commonly referred to as Restriction of Hazardous Substances Directive or RoHS).

**CE MARKING**

The product conforms with the essential requirements of the applicable EC directives.

**WARRANTIES AND TECHNICAL SUPPORT:**

For fast and easy technical support for your ADFweb.com SRL products, consult our internet support at [www.adfweb.com](http://www.adfweb.com). Otherwise contact us at the address [support@adfweb.com](mailto:support@adfweb.com)

**RETURN POLICY:**

If while using your product you have any problem and you wish to exchange or repair it, please do the following:

- Obtain a Product Return Number (PRN) from our internet support at [www.adfweb.com](http://www.adfweb.com). Together with the request, you need to provide detailed information about the problem.
- Send the product to the address provided with the PRN, having prepaid the shipping costs (shipment costs billed to us will not be accepted).

If the product is within the warranty of twelve months, it will be repaired or exchanged and returned within three weeks. If the product is no longer under warranty, you will receive a repair estimate.



**ADFweb.com S.r.l.**  
Via Strada Nuova, 17  
IT-31010 Mareno di Piave  
TREVISO (Italy)  
Phone +39.0438.30.91.31  
Fax +39.0438.49.20.99  
[www.adfweb.com](http://www.adfweb.com)

